


SEAT

Front seat

To remove the front seat (1), pull up the seat end and remove the two mounting bolts (2), and then pull the seat back and up. To install the front seat, insert the tabs (3) into the recess (4) under the frame and tighten the mounting bolts securely.

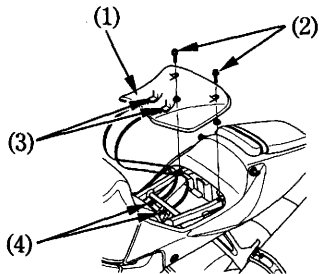


- (1) Front seat
- (2) Mounting bolts
- (3) Tabs
- (4) Recess

Rear seat

To remove the rear seat (1), insert the ignition key (2) into the seat lock (3) and turn it clockwise. Remove the rear seat.

Installation:

- To close the rear seat, push down on the rear of the seat.

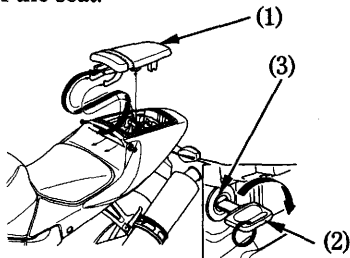

- (1) Rear seat
- (2) Ignition key
- (3) Seat lock