


## INNER COWL

### Removal:

1. Remove the bolts (1).
2. Remove the clips (2).
3. Remove the inner cowl (3).

### Installation:

- Installation can be done in the reverse order of removal.

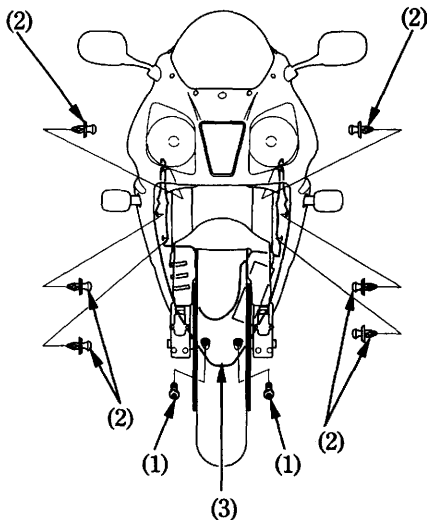

- (1) Bolts  
(2) Clips

- (3) Inner cowl