

## **SPARK PLUGS**

Refer to the Safety Precautions on page 74 .

Recommended plugs:

Standard:

IFR9H11 (NGK) or  
VK27PRZ11 (DENSO)

For cold climate: (Below 5°C, 41°F)

IFR8H11 (NGK) or  
VK24PRZ11 (DENSO)

### **NOTICE**

Never use a spark plug with an improper heat range. Severe engine damage could result.

This motorcycle uses the spark plugs that have an iridium coated center electrode. Be sure to observe the following when servicing the spark plugs.

- Do not clean the spark plug. If the electrode is contaminated with accumulated objects or dirt, replace the spark plug with a new one.
- Use only “wire-type feeler gauge” to check the spark plug gap to prevent damaging the iridium coating of the center electrodes. Never use “leaf-type feeler gauge”.
- Do not adjust the spark plug gap. If the gap is out of specification, replace the spark plug with a new one.