



1. To remove the spark plug from the rear cylinder, raise the fuel tank (page 58) and remove the front seat (page 51).
2. Remove the spark plug cap (1) from the spark plug, and remove the spark plug using the spark plug wrench (2) provided in the tool kit (page 78).

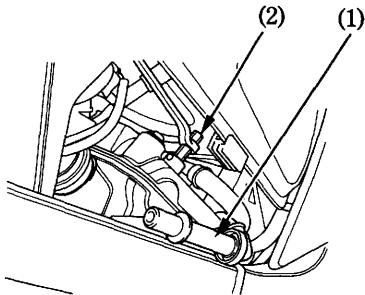

- (1) Spark plug cap
(2) Spark plug wrench

3. To remove the spark plug from the front cylinder, remove the air guide plate (3) by removing the nuts (4).
4. Remove the spark plug with the spark plug wrench.

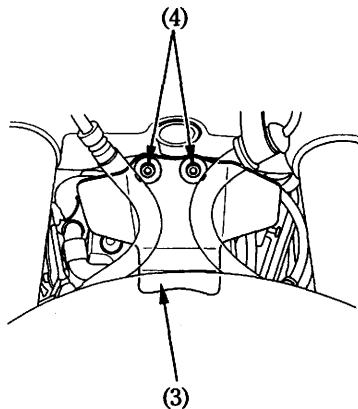

- (3) Air guide plate
(4) Nuts