

Fuse Box:

The fuse box is located behind the left lower cowl.


The specified fuses are:

10 A, 20 A

1. Remove the left lower cowl (page 56).
2. Open the fuse box cover (1).
3. Pull out the old fuse and install a spare fuse (2).

The spare fuses are located in the fuse box.

4. Close the fuse box cover and install the left lower cowl.

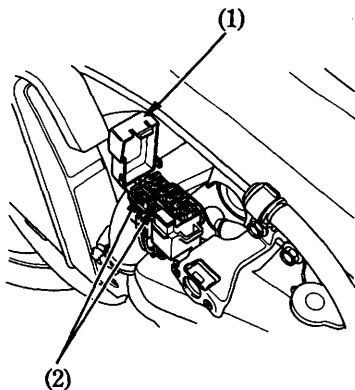

(1) Fuse box cover

(2) Spare fuses