



Gauges, Indicators & Displays

6	multi-function display	The display includes the following functions: <i>Display Check.</i>
	odometer	Shows the total miles or kilometers ridden (page 22).
	tripmeter	Shows the number of miles or kilometers ridden since you last reset the meter. To zero (0) the tripmeter, push and hold the multi-function select and reset button (page 28).
	coolant temperature meter	Shows coolant temperature (page 20). USA : Fahrenheit (°F), Canada : Centigrade (°C).
7	low oil pressure indicator (red)	Lights when engine oil pressure is low enough to cause engine damage. If the low oil pressure indicator lights during operation, pull safely to the side of the road. See page 186 for instructions and cautions. <i>Lamp Check.</i>
8	coolant temperature indicator (red)	Lights when the coolant is over the specified temperature. If the indicator comes on, pull safely to the side of the road. See page 184 for instructions and cautions. <i>Lamp Check.</i>

