



## Gauges, Indicators & Displays

### Overheating Message:


When the coolant temperature reaches 251°F (122°C), the numbers in the temperature display start flashing and the coolant temperature indicator (3) comes on. If this occurs, stop the engine and check the reserve tank coolant level. Read pages 100 – 103 and do not ride the motorcycle until the problem has been corrected.

If the coolant temperature reaches 251°F (122°C) while the odometer and tripmeter display is selected, the display will automatically switch to coolant temperature.


### NOTICE

*Continuing to ride with an overheated engine can cause serious engine damage.*

< For USA >

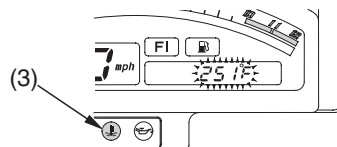

< For Canada >

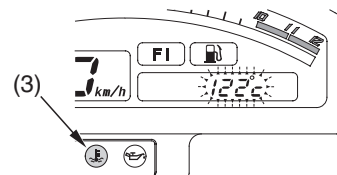

(3) coolant temperature indicator

