



Controls & Features

Horn Button




The horn is used to alert other motorists. To operate, push the horn button (3).

Multi-function Select and Reset Button

The display (1) has three functions, odometer, tripmeter and temperature meter.

Push the button (2) to select the “ODO”, “TRIP” or “TEMP” mode.

To reset the tripmeter, push and hold the button with the display in the “TRIP” mode.

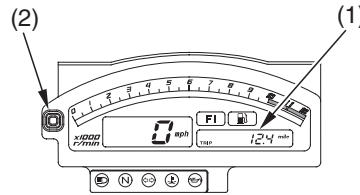

- (1) multi-function display
- (2) multi-function select and reset button

