



Servicing Your Honda

Service Preparations

Maintenance Component Locations	73
Tool Kit.....	76
Owner's Manual Storage.....	77
Seat Removal.....	78
Rear Cowl Removal	81
Lower Fairing Removal	82
Inner Fairing Removal	84
Clip Removal.....	85
Raising the Fuel Tank	86

Service Procedures

Fluids & Filters

Fuel	87
Engine Oil & Filter.....	90
Coolant.....	100
Crankcase Breather	104

Engine

Throttle	105
Clutch System.....	107
Engine Idle Speed.....	110
Spark Plugs	112

Chassis

Suspension	116
Brakes	125
Tires	131
Side Stand.....	138
Drive Chain.....	139

Electrical

Battery.....	146
--------------	-----

Appearance Care	151
-----------------------	-----

