



## Periodic Maintenance

Tires & Wheels	Check the air pressure with a gauge and add air if needed (page 131). Examine the tread for wear (page 133). Look closely for nails, embedded objects, cuts, and other types of damage (page 133). Roll your motorcycle so you can inspect the entire surface. Check the condition of the wheels.
Fluids	Check the levels of the engine oil (page 94 ), coolant (page 101 ), clutch fluid (page 108 ) and brake fluid (page 127 ). Add the correct fluid as necessary, and investigate the cause of any low fluid level.
Lights	Make sure the headlight, brakelight, taillight, and turn signals are working properly.
Freeplay	Check the freeplay of the throttle grip (page 105 ).
Drive Chain	Check condition, adjust slack, and lubricate as needed (page 140 ).
Fuses	Make sure you have a full supply of spare fuses.
Nuts & Bolts	Check the major fasteners and tighten as needed.

