



Maintenance Schedule

ITEM	NOTE	FREQUENCY	ODOMETER READING (Note 1)								Refer to page
		× 1,000 mi	0.6	4	8	12	16	20	24		
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
NON-EMISSION RELATED ITEMS		DRIVE CHAIN	EVERY 500 mi (800 km) I, L								139
		BRAKE FLUID	4		I	I	R	I	I	R	126
		BRAKE PAD WEAR			I	I	I	I	I	I	129
		BRAKE SYSTEM		I	I		I		I		125
	*	BRAKELIGHT SWITCH				I		I		I	—
	*	HEADLIGHT AIM				I		I		I	—
		CLUTCH SYSTEM				I		I		I	107
		CLUTCH FLUID	4		I	I	R	I	I	R	108
		SIDE STAND				I		I		I	138
	*	SUSPENSION				I		I		I	—
	*	NUTS, BOLTS, FASTENERS		I		I		I		I	—
	**	WHEELS/TIRES				I		I		I	—
	**	STEERING HEAD BEARINGS		I		I		I		I	—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 216).

**In the interest of safety, we recommend these items be serviced only by your Honda dealer.

70 Servicing Your Honda

