




## Seat Removal

---

Refer to *Safety Precautions* on page 62 .

The front seat must be removed for battery and fuse maintenance, or to lift the fuel tank.

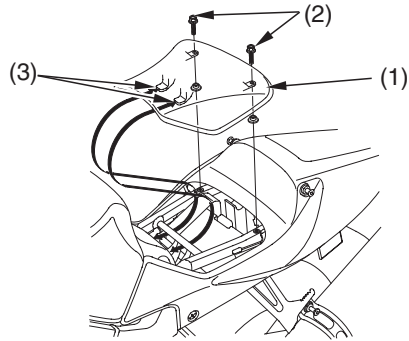

(1) front seat  
(3) prongs

(2) mounting bolts

### Removal

1. Pull up the front seat ( 1 ) end and remove the seat mounting bolts ( 2 ).
2. Pull the seat ( 1 ) back and up.

### Installation

1. Insert the prongs ( 3 ) into the recess under the frame.
2. Tighten the seat mounting bolts securely.

