



## Rear Cowl Removal

Refer to *Safety Precautions* on page 62 .


The rear cowl must be removed for main fuse maintenance.

### Removal

1. Remove the front seat (page 78).
2. Remove the seat cowl panel (page 79).
3. Remove the clips (1) (page 85).
4. Remove the bolts A (2) and bolts B (3).
5. Slightly spread the front of the rear cowl (4) and remove it.

### Installation

- Installation can be done in the reverse order of removal.

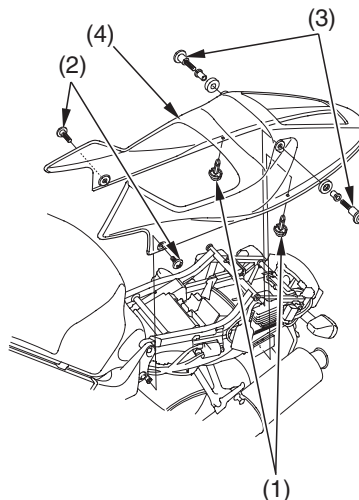

(1) clips  
(2) bolts A

(3) bolts B  
(4) rear cowl

