



## Inner Fairing Removal

Refer to *Safety Precautions* on page 62 .


The inner fairing must be removed to service the engine oil filter.

### Removal

1. Remove the lower fairing (page 82).
2. Remove the bolts (1).
3. Remove the clips (2).

### Installation

- Installation can be done in the reverse order of removal.

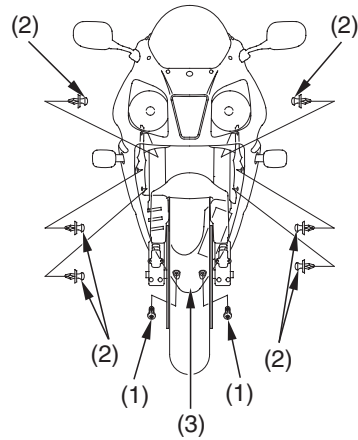

(1) bolts  
(2) clips

(3) inner fairing

