

Fuel

Never use stale or contaminated gasoline or an oil/gasoline mixture. Avoid getting dirt, dust, or water in the fuel tank.


Fuel Capacity

Fuel tank capacity: 4.76 US gal (18.0 0)

The tank should be refilled as soon as possible when the fuel indicator comes on.

Refueling Procedure

Refer to Safety Precautions on page 62.

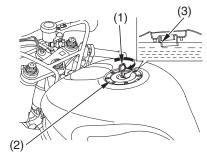

- (1) ignition key
- (3) filler neck
- (2) fuel fill cap
- 1. Insert the ignition key (1) in the fuel fill cap (2) and turn it clockwise.

88 Servicing Your Honda

