



## Engine Oil & Filter

5. Check that the oil level is between the upper (1) and lower (2) level marks in the inspection window (3).
  - If the oil is at or near the upper level mark (1) — you do not have to add oil.
  - If the oil is below or near the lower level mark (2) — remove the lower fairing (4) (page 82 ), the oil filler cap (5) and add the recommended oil until it reaches the upper level mark. (Do not overfill.)  
Reinstall the oil filler cap.
6. Check for oil leaks.

### Changing Engine Oil & Filter

Refer to *Safety Precautions* on page 62 .

Your motorcycle's oil filter has very specific performance requirements. Use a new genuine Honda oil filter or a filter of equal quality specified for your model.

#### NOTICE

*Using the wrong oil filter may result in leaks or premature engine damage.*

