## Throttle

## **Throttle Inspection**

Refer to Safety Precautions on page 62.

- 1. Check that the throttle assembly is positioned properly and the securing bolts are tight.
- 2. Check for smooth rotation of the throttle from fully open to fully closed in all steering positions. If there is a problem, see your Honda dealer.

**106** Servicing Your Honda

