



Clutch System


1. Turn the adjuster dial (1) while pushing the clutch lever (2) forward.
2. Align the index mark (3) on the clutch lever with the numbers (4) on the adjuster dial.
3. Start the engine, pull the clutch lever in, and shift into gear. Make sure the engine does not stall and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. Your motorcycle should move smoothly and accelerate gradually.



Fluid Level Inspection

Refer to *Safety Precautions* on page 62 .

LEFT FRONT

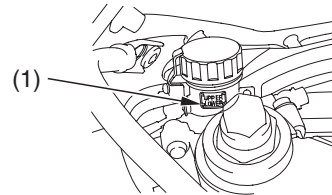

(1) LOWER level mark

