05/11/15 12:26:48 31MCF660 120

## **Engine Idle Speed**

- 2. Place your motorcycle on its side stand on a firm, level surface.
- 3. Turn the bolt (1) 90° counterclockwise and pull the right lower fairing (2) aside.
- 4. Shift into neutral. Start the engine.
- 5. Adjust idle speed with the throttle stop screw (3).Idle speed (in neutral):
  - 1,300  $\pm$  100 rpm

Servicing Your Honda 111

