



Spark Plugs


Spark Plug Replacement & Inspection

Refer to *Safety Precautions* on page 62 .

Spark Plug Access

To access the rear cylinder spark plugs:

LEFT SIDE
(Rear Cylinder)

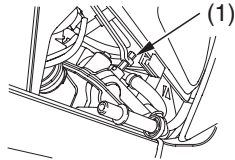


(1) spark plug wrench

1. Remove the front seat (page 78).
2. Raise the fuel tank (page 86).
3. Clean any dirt from around the spark plug bases.

To access the front cylinder spark plugs:

FRONT
(Front Cylinder)

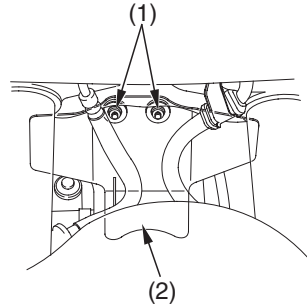

(1) nuts (2) air guide plate

1. Remove the nuts (1) and the air guide plate (2).

(cont'd)

