



## If You Have a Flat Tire

### Emergency Rear Wheel Removal/Installation

Refer to *Safety Precautions* on page 62 .


We recommend wheel removal be done only by your Honda dealer or another qualified mechanic. Do not attempt to remove the wheel on your own. Wheel removal requires mechanical skill and professional tools.

#### Removal

1. Park your motorcycle on a firm, level surface.
2. Raise the rear wheel off the ground by placing a support block under the engine.

3. Loosen the rear axle nut ( 1 ).
4. Loosen the drive chain adjuster lock nuts ( 2 ) and turn the adjusting bolts ( 3 ) so the rear wheel can be moved all the way forward for maximum drive chain slack.

#### RIGHT REAR

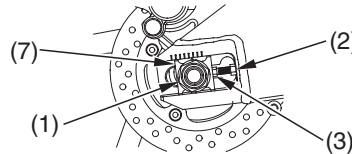

- (1) rear axle nut
- (2) lock nuts
- (3) adjusting bolts
- (7) right chain adjustment plate

5. Remove the rear axle nut ( 1 ) and washer.

## 180 Taking Care of the Unexpected

