

| | | | |
|--------------------------------|----|---------------------------------------|----|
| MAINTENANCE SAFETY TIPS | 36 | Battery | 64 |
| <u>Maintenance</u> | 39 | Battery Terminals | 65 |
| Daily inspection | 41 | Battery removal / installation | 66 |
| Regular service | 44 | Fuses | 67 |
| Maintenance Schedule | 45 | Inspection / replacement | 68 |
| Basic maintenance | 48 | Tyres | 69 |
| Engine oil | 49 | Pressure | 69 |
| Oil level | 49 | Tread | 69 |
| Adding Oil | 52 | Replacement tyres | 70 |
| Coolant | 53 | Air Filter | 71 |
| Coolant level | 53 | Air filter element replacement | 71 |
| Adding coolant | 54 | <u>Cleaning</u> | 72 |
| Drive Chain | 56 | <u>Damper Unit</u> | 74 |
| Chain tension | 56 | <u>For our environment</u> | 74 |
| Lubrication / Cleaning | 57 | <u>Colour labels</u> | 75 |
| Brakes | 58 | <u>Genuine Honda mufflers</u> | 76 |
| Front brake | 58 | <u>Frame serial number</u> | 77 |
| Brake fluid level | 58 | <u>Overheat</u> | 78 |
| Brake pads wear | 59 | <u>Engine does not start</u> | 79 |
| Rear brake | 60 | <u>Specifications</u> | 80 |
| Brake fluid level | 61 | <u>Service Data and Noise Warning</u> | 83 |
| Brake pads wear | 62 | | |
| Clutch | 62 | | |
| Clutch lever free play | 63 | | |