

Coolant

Coolant Level Check

1. Remove the reservoir cap.
2. Wipe off the coolant on the coolant level gauge.
3. Hold the motorcycle upright on flat ground.
4. Insert the coolant level gauge. Do not set the reservoir tank cap. Check the coolant level is between the maximum and the minimum lines.

If the level is close to the minimum level, add coolant to the maximum line. Refer to the next page for adding coolant.

5. Attach the reservoir cap.

If the coolant level drops significantly, there could be a leak in the radiator or the hoses. Similarly, an empty tank indicates a major problem in the system. Contact an Authorized Honda Dealer for technical assistance.

