

Installation Notes:

- To install the rear wheel, reverse the removal procedure.
- Before installing the rear wheel, check that the wheel hub and final drive gear splines are coated with grease.
- Be sure the splines on the wheel hub fit into the final gear case.
- Tighten and torque the nuts and bolts to the specified torque:

Axle nut:

110 N·m (11.2 kgf·m , 81 lbf·ft)

Bracket bolt:

69 N·m (7.0 kgf·m , 51 lbf·ft)

When installing the wheel, carefully fit the brake disc between the brake pads to avoid damaging the pads.

After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.