

# Crankcase Breather


---

Refer to *Safety Precautions* on page 64 .

Service the crankcase breather more frequently if your motorcycle is ridden in the rain or often at full throttle. Service the breather if you can see deposits in the transparent section of the drain tube.

## Draining

### RIGHT FRONT

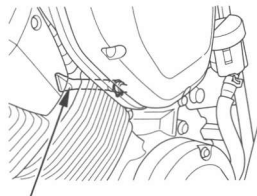

(1)

(1) crankcase breather tube

1. Place a drain pan under the crankcase breather tube (1).
2. Remove the tube to drain the deposits in it.
3. Reinstall the crankcase breather tube.