



(Ref.No.) Description	Function
(5) Right turn signal indicator (green)	Flashes when the right turn signal operates.
(6) Odometer/Tripmeter/ Fuel gauge display	The display includes the following functions; This display shows the initial display (page 23).
Odometer	Shows accumulated mileage (page 24).
Tripmeter	Shows mileage per trip (page 24).
Fuel gauge	Shows approximate fuel supply available (page 26).
(7) PGM-FI malfunction indicator lamp (MIL) (amber)	Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON. If it comes on at any other time, reduce speed and take the scooter to your Honda dealer as soon as possible.

