


Rear Turn Signal Bulb

The right and left turn signal bulbs replacement can be done in the same way.

1. Remove the turn signal assembly (1) by removing the screws (2).
2. Unhook the hook (3) and remove the turn signal lens (4) from the turn signal assembly.
3. Slightly press the bulb (5) and turn it counterclockwise.
4. Install a new bulb in the reverse order of removal.
 - Use only the amber bulb.

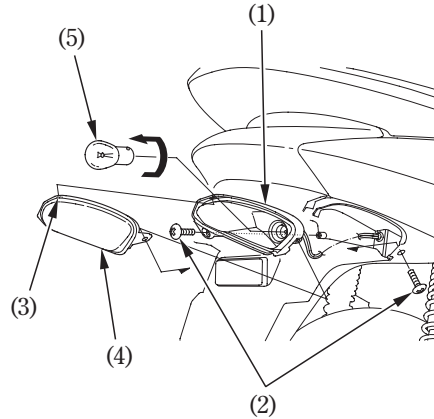

- | | |
|--------------------------|----------------------|
| (1) Turn signal assembly | (4) Turn signal lens |
| (2) Screws | (5) Bulb |
| (3) Hook | |

