


# Storage Equipment

## Seat Open

- 1 Turn the handlebar pointed straight ahead.
- 2 Insert the ignition key and turn it to the position of OPENER.
- 3 Push the SEAT side of the fuel lid and seat opener switch.
- 4 Open the seat.

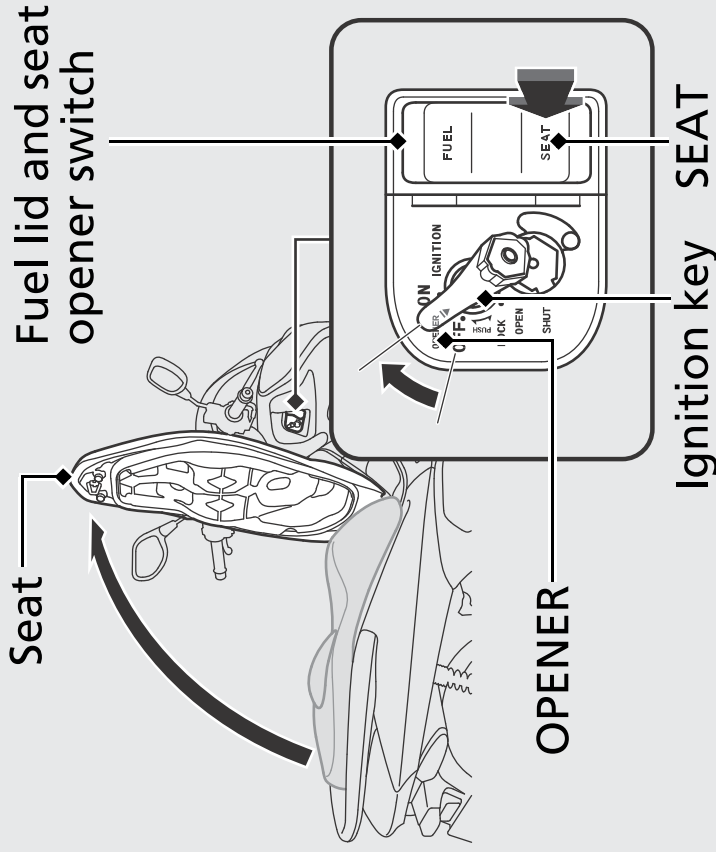

## Seat Close

Close and push down on the rear of the seat until locks. Make sure that the seat is locked securely to pull it up lightly. Take care not to lock your key in the compartment under the seat.