

# Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

<b>Importance of Maintenance</b> .....	P. 43	<b>Engine Oil</b> .....	P. 66
<b>Maintenance Schedule</b> .....	P. 44	<b>Coolant</b> .....	P. 70
<b>Maintenance Fundamentals</b> .....	P. 47	<b>Brakes</b> .....	P. 72
<b>Tool Kit</b> .....	P. 57	<b>Side Stand</b> .....	P. 77
<b>Removing &amp; Installing Body Components</b> ....	P. 58	<b>Throttle</b> .....	P. 78
Battery Cover .....	P. 58	<b>Other Adjustments</b> .....	P. 79
Clip A.....	P. 59	Headlight Aim.....	P. 79
Clip B .....	P. 60		
Battery .....	P. 61		
<b>Crankcase Breather</b> .....	P. 62		
<b>Spark Plug</b> .....	P. 63		