

Checking the Engine Oil

Check the engine oil with the Idling Stop switch **IDLING**.

- 1.** Park your scooter on its centre stand on a firm, level surface.
- 2.** If the engine is cold, idle the engine for 3 to 5 minutes.
- 3.** Turn the ignition switch off, stop the engine and wait for 2 to 3 minutes.
- 4.** Remove the oil fill cap/dipstick and wipe it clean.
- 5.** Insert the oil fill cap/dipstick until it seats, but don't screw it in.
Check that the oil level is between the upper and lower level marks in the oil fill cap/dipstick.
- 6.** Securely install the oil fill cap/dipstick.

