


Checking the Coolant

1. Place your scooter on a firm, level surface.
2. Hold your scooter in an upright position.
3. Open the seat. ➔ P. 38
4. Check that the coolant level is between the UPPER and LOWER level marks in the reserve tank.

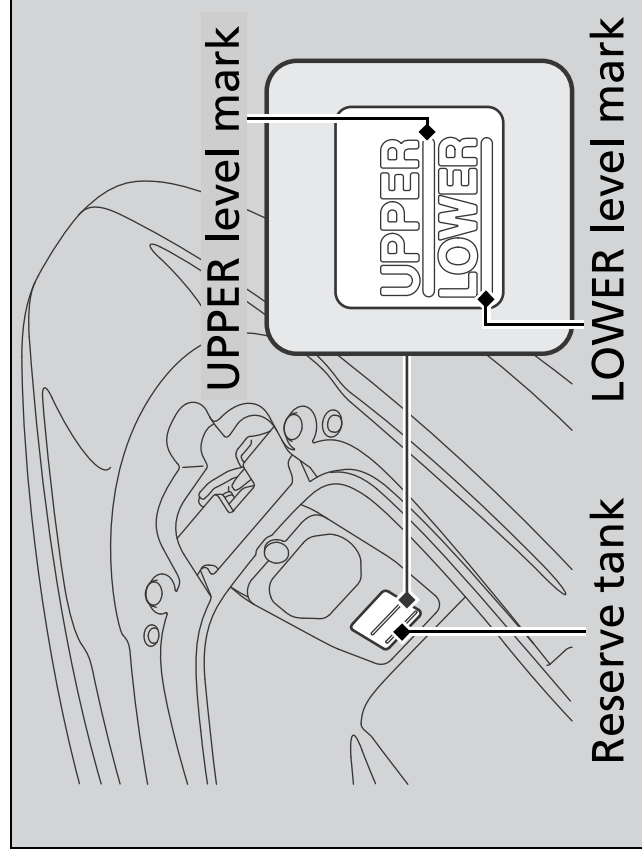

If the coolant level is dropping noticeably or the reserve tank is empty, you likely have a serious leak. Have your scooter inspected by your dealer.

Adding Coolant

1. If the coolant level is below the lower level, add the recommended coolant (➔ P. 52) until the level reaches the UPPER level mark.
Add fluid only from the reserve tank cap and do not remove radiator cap.
2. Remove the clip B. ➔ P. 60
3. Remove the reserve tank lid.