

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 81	<b>Engine Does Not Start Even If the Throttle is</b>	
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 82	<b>Opened</b> .....	P. 86
<b>Warning Indicators On</b> .....	P. 83	<b>Tyre Puncture</b> .....	P. 87
PGM-FI (Programmed Fuel Injection)		<b>Electrical Trouble</b> .....	P. 88
Malfunction Indicator Lamp (MIL) .....	P. 83	<b>Battery Goes Dead</b> .....	P. 88
<b>Other Warning Indication</b> .....	P. 84	<b>Burned-out Light Bulb</b> .....	P. 88
Fuel Gauge Failure Indication .....	P. 84	<b>Blown Fuse</b> .....	P. 94
<b>When the Idling Stop System Does Not Operate Properly</b> .....	P. 85		
Engine Does Not Stop by the Idling Stop System .....	P. 85		