

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➔ P. 31
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Make sure the side stand is raised.
 - Check for a blown fuse. ➔ P. 94
 - Check for a loose battery connection or battery terminal corrosion. ➔ P. 49
 - Check the condition of the battery. ➔ P. 88
- If the problem continues, have your scooter inspected by your dealer.