



Front Turn Signal Bulb

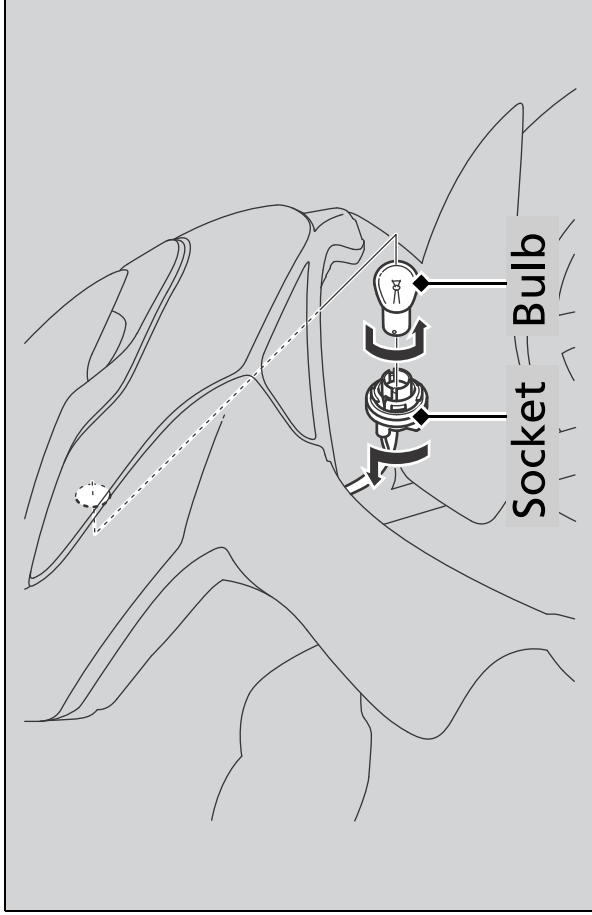

1. Turn the socket counterclockwise and pull it out.
2. Slightly press the bulb in and turn it counterclockwise.
3. Install a new bulb and parts in the reverse order of removal.
► Use only the amber bulb.

Rear Turn Signal Bulb

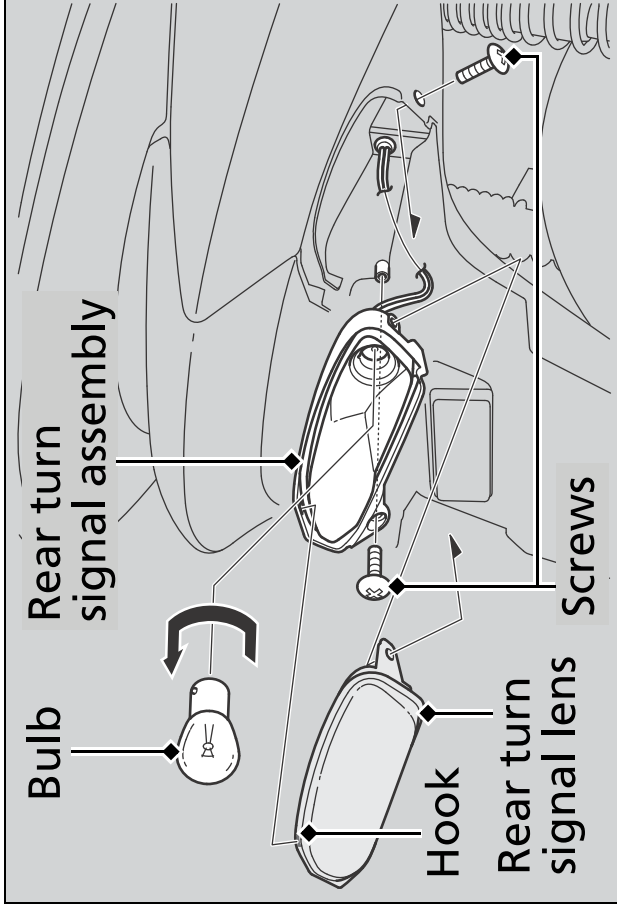

1. Remove the rear turn signal assembly by removing the screws.
2. Unhook the hook and remove the rear turn signal lens from the rear turn signal assembly.
3. Slightly press the bulb in and turn it counterclockwise.