

After removing your scooter from storage, inspect all maintenance items required by the Maintenance Schedule.

Transporting Your Scooter

If your scooter needs to be transported, it should be carried on a motorcycle trailer or a flatbed truck or trailer that has a loading ramp or lifting platform, and motorcycle tie-down straps. Never try to tow your scooter with a wheel or wheels on the ground.

NOTICE

Towing your scooter can cause serious damage to the transmission.