

Ref. No.	Description	F u n c t i o n
①	Speedometer	Indicates driving speed.
②	Odometer	Indicates total accumulated distance traveled.
③	High beam indicator light (red)	Light will be on when headlight is on high beam.
④	Neutral indicator light (green)	Light will be on when the transmission is in neutral.
⑤	Tachometer	Indicates engine rpm.
⑥	Tachometer red zone	Do not allow indicated engine rpm to enter or exceed the red zone. Operation at excessive rpm will shorten engine life and may cause serious damage.
⑦	Tripmeter	Indicates distance traveled. (meter can be reset for each trip)
⑧	Tripmeter reset knob	Reset knob for "zeroing" the trip meter.