


in speed, then counterclockwise until the engine again misses or decreases in speed. Set the air screw exactly between these two extreme positions. Usually the correct setting (between extremes of rich and lean) will be found to be  $7/8 \sim 15/8$  turns open from a fully closed position.

3. If idle speed changes after adjusting fuel mixture, readjust the idle speed screw.

## Fuel Filter Maintenance

The fuel filter is incorporated in the fuel valve ① which is mounted on the bottom of the fuel tank at the left side. Accumulation of dirt in the filter will restrict the flow of the fuel and cause the carburetor to malfunction, therefore, the fuel filter should be serviced periodically.

1. Turn the fuel valve ① to the "S" position.

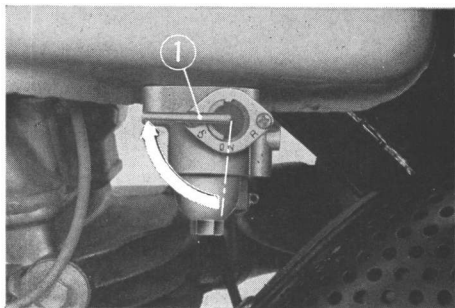

① Fuel valve