



1. Remove the clutch adjuster rubber cap ①.
2. Loosen the clutch adjuster lock nut ②, and turn the clutch adjuster ③ clockwise until it stops. Then turn it counterclockwise  $1/2 \sim 1$  turn, and lock it in place by tightening the lock nut. After adjustment, install the rubber cap with its arrow mark aligned with the dot on the crankcase.

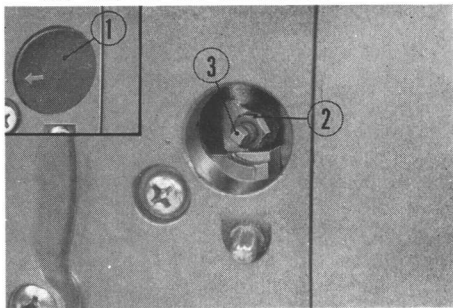

- ① Clutch adjuster rubber cap
- ② Clutch adjuster lock nut
- ③ Clutch adjuster

3. Clutch lever free play can be adjusted at either end of the clutch cable. Major adjustments (such as after replacing the clutch cable) should be made at the lower adjuster ⑤. Minor adjustments should be made at the upper adjuster ⑦.

The adjustment procedure is similar for using either the upper or lower adjuster.

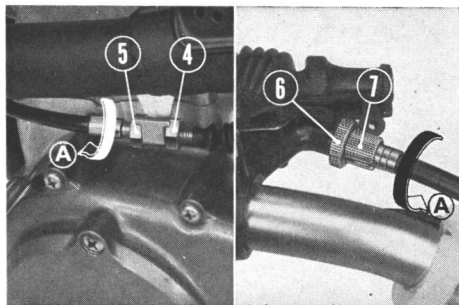

- ④ Lock nut    ⑤ Clutch cable lower adjuster
- ⑥ Lock nut    ⑦ Clutch cable upper adjuster