


and then the front wheel can be removed.

5. To install the front wheel, follow the reverse of removal procedure outlined in steps 1 through 4.

NOTE: When installing the front axle holders, make sure the "F" mark is forward.

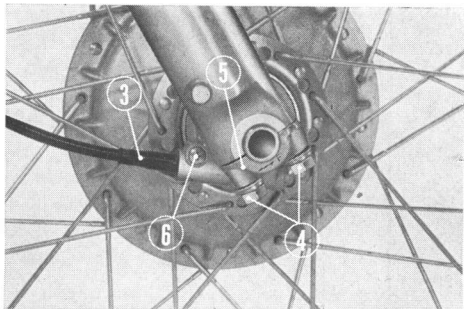


- ③ Speedometer cable
- ④ Front axle holder nuts
- ⑤ Front axle holder
- ⑥ Speedometer cable set screw

Rear Wheel Removal

To remove the rear wheel, proceed as follows:

1. Place a wood block under the engine and raise the rear wheel off the ground.
2. Remove the rear brake adjusting nut ①.
3. Remove the brake panel stopper arm attaching bolt ②.

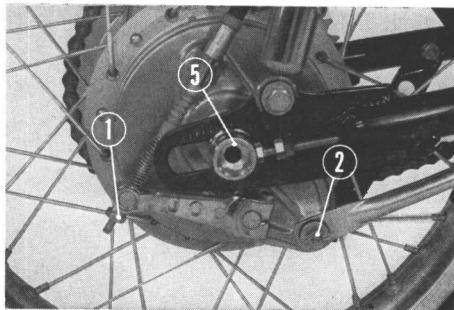

- ① Rear brake adjusting nut
- ② Brake panel stopper arm attaching bolt
- ⑤ Rear axle