

PARTS FUNCTION

Instruments and Indicators



The indicators are in the speedometer, above the headlight. Their functions are described in the table on the following page.

USA model:

Total and trip counters read in miles.

Canadian model:

Total and trip counters read in kilometers.

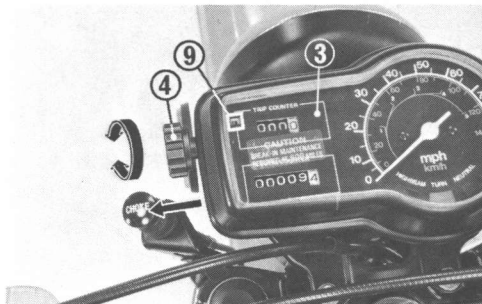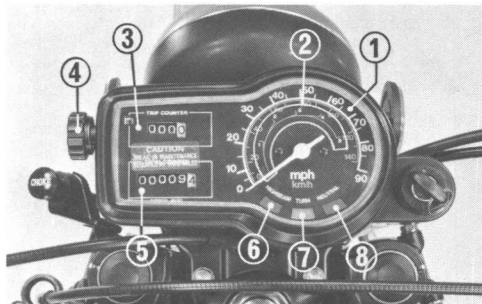

- (1) Speedometer
- (2) Gear range indicators
- (3) Trip counter
- (4) Trip counter reset knob
- (5) Total counter
- (6) High beam indicator
- (7) Turn signal indicator
- (8) Neutral indicator
- (9) Trip "ON-OFF" indicator