


Ignition Switch

The ignition switch (1) is on the right side of the speedometer.

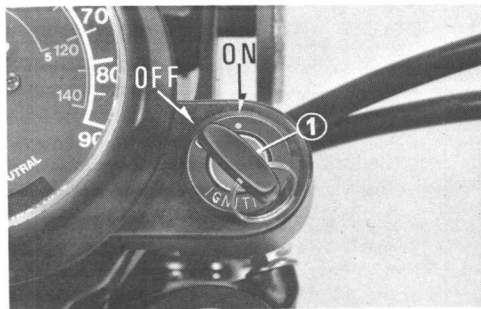

(1) Ignition switch

| Key Position | Function | Key Removal |
|--------------|---|------------------------|
| OFF | Engine and lights cannot be operated. | Key can be removed. |
| ON (red dot) | Taillight and meter lights will be on and other lights can be operated. The engine can be started. NOTE: * The headlight operates whenever the engine is running. | Key cannot be removed. |