

Air Cleaner


The air cleaner should be serviced at regular intervals (page 39). When riding in dusty areas, more frequent service may be necessary.

1. Remove the air cleaner cover screws (1) and the cover (2).
2. Pull out the element retainer (3) and remove the air cleaner element (4).

3. Inspect the air cleaner element (4). If the element is very dirty, it must be cleaned in a non-flammable solvent and lubricated. See your authorized Honda dealer for this service.



(1) Screw (2) Air cleaner cover

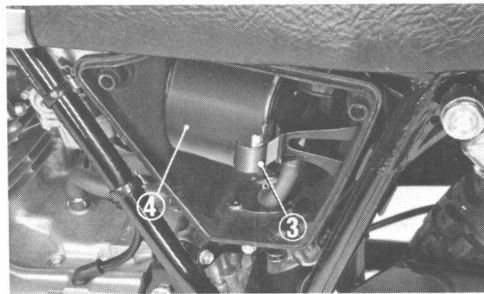

(3) Element retainer (4) Air cleaner element