


Battery

If the motorcycle is operated with insufficient battery electrolyte, sulfation and battery plate damage will occur.

If rapid loss of electrolyte is experienced, or if your battery seems to be weak, causing electrical problems, see your authorized Honda dealer.

Battery electrolyte:

The battery is next to the right side cover. The electrolyte level can be checked through a window in the battery cover.

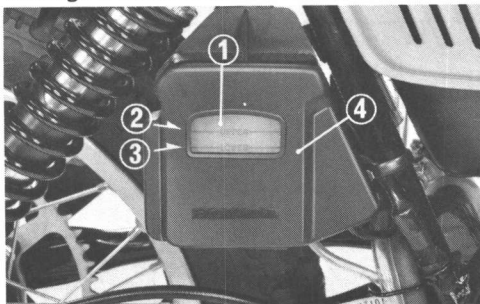


(1) Battery
(2) Upper level mark
(3) Lower level mark
(4) Battery cover

The electrolyte level must be maintained between the upper (2) and lower (3) level marks on the side of the battery. If the electrolyte level is low, remove the battery cover (4), and battery filler caps (5).

Carefully add distilled water to the upper level mark. Use a small syringe or plastic funnel to add water.

NOTE:

* Use only distilled water in the battery. Tap water will shorten the service life of the battery.

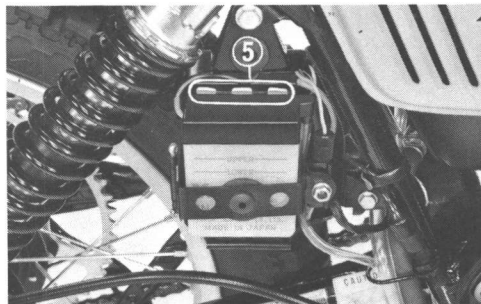

(5) Filler caps