


Engine Oil Filter

NOTE:

* Change the filter after draining the engine oil.

1. Remove the oil filler bolts (1) and oil filter cover (2).
2. Remove the oil filter (3) from the cover.
3. Check that the oil filter cover O-ring (4) is in good condition and then install the new oil filter. Use the Honda oil filter or an equivalent filter specified for your model. Other filters not specified for your model may not filter impurities properly.

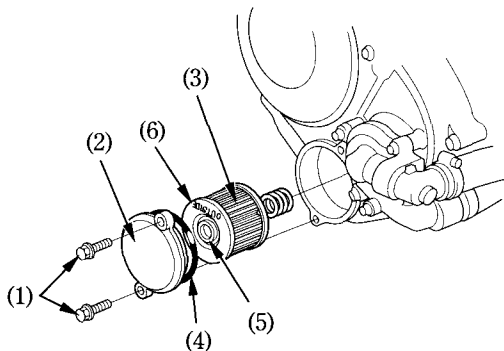

- (1) Oil filter bolts
- (2) Oil filter cover
- (3) Oil filter

- (4) O-ring
- (5) Rubber seal
- (6) OUT-SIDE mark