


## Steering Lock

The steering lock ① is located on the steering stem directly below the headlight case. Turn the handle bar all the way to the steering stop, either to the left or right, insert the key into the lock, turn the key 60° to the left and press in, turn the key back to the original position and remove the key. This locks the steering section to help prevent theft.

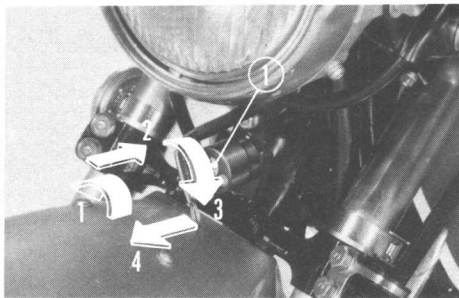


① Steering lock

## Seat Lock and Helmet Holder

The seat lock ① is located on the lower right side of the seat. Insert the main switch key and turn it counterclockwise 90° to unlock and raise the seat. The helmet holder ② is located under the seat. Hang the helmet on the hook and lock the seat.

The helmet holder ② is located under the seat. Hang the helmet on the hook and lock the seat.

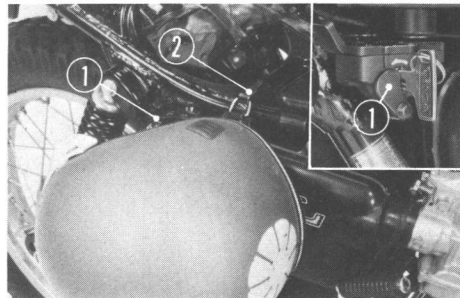

① Seat lock      ② Helmet holder