


Turn Signal Switch

The turn signal switch is located on the left handle bar grip switch housing. It can be operated without taking the hand off the handle bar grip. To signal a left turn move the switch to the "L" position. To signal a right turn move the switch to the "R" position. When the turn has been completed the switch must be returned to the center "OFF" position.

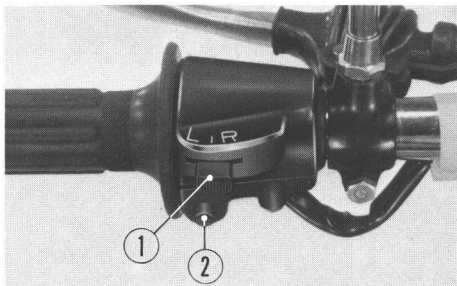


- ① Turn signal switch
- ② Horn button

Horn Button

The horn button ② is located on the left handle bar grip switch housing. When the horn button is depressed the horn will operate.

Ignition Switch

The three position ignition switch ③ is located on top of the right handle bar grip switch housing. In the "ON" position (center) the ignition circuit is complete

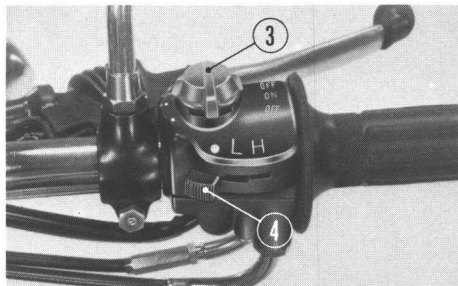

- ③ Ignition switch
- ④ Headlight switch