

BREAK-IN PROCEDURE //

During the first 600 miles (1,000 km), the motorcycle should not be operated in excess of 80% of the maximum RPM in any gear.


Careful break-in during the initial mileage will measurably extend the service life of the engine.

PARKING //

When parking the motorcycle, turn the main switch to the "OFF" position and remove the key. Also, the steering should be locked and the fuel valve turned to the "S" position.

TOOL KIT //

The tool kit ① and spare fuses ② are mounted under the seat. Minor adjustment and parts replacement can be performed with the tools contained in the kit. Adjustments or repairs which cannot be performed with these tools should be referred to your Honda dealer.

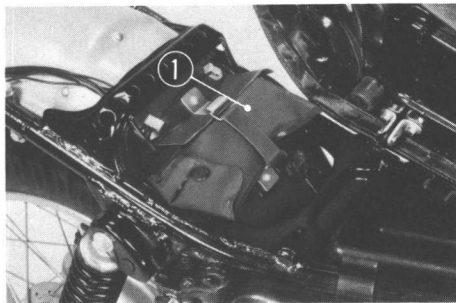

① Tool kit