
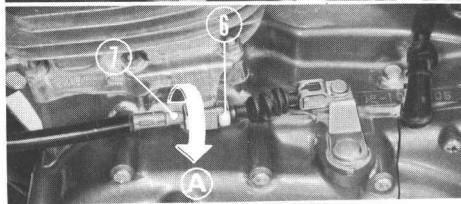


3. Clutch lever free play can be adjusted at either end of the clutch cable. Major adjustments (after replacing the clutch cable) should be made at the lower adjuster (7). Minor adjustments should be made at the upper adjuster (5).

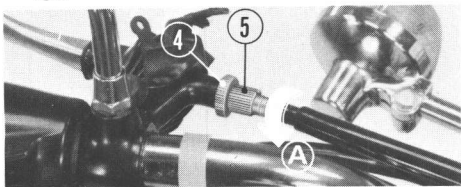

- ④ Lock nut ⑤ Clutch cable upper adjuster
⑥ Lock nut ⑦ Clutch cable lower adjuster

The adjustment procedure is similar for either the upper or lower adjuster. Loosen the lock nut (⑥ lower or ④ upper), turn the adjuster (⑦ lower or ⑤ upper) to provide the correct clutch lever free play, then retighten the adjuster. Turning the adjuster in direction A will decrease free play and vice versa.

4. After the adjustment has been made, ensure that the clutch is not slipping and the clutch is properly disengaging. After the engine starts, pull in the clutch lever and shift into gear, and make sure that the engine does not stall, nor the motorcycle start to creep. Gradually release the clutch lever and open the throttle, the motorcycle should start smoothly and accelerate gradually.