


Front Wheel Removal

To remove the front wheel, proceed as follows:


1. Place a wood block under the engine and raise the front wheel off the ground.
2. Remove the cotter pin ① and disconnect the front brake cable ② from the brake arm.
3. Remove the speedometer cable set screw ⑥ and disconnect the speedometer cable ③.

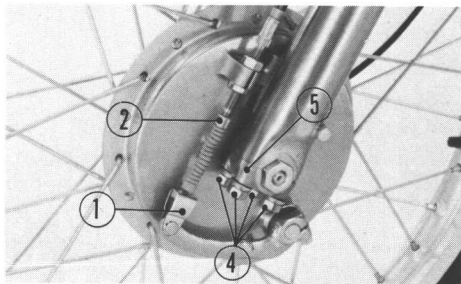

- ① Cotter pin ③ Speedometer cable
② Front brake cable ④ Front axle holder nuts

4. Remove the front axle holder nuts ④ and remove the front axle holders and then the front wheel can be removed.
5. To install the front wheel, reverse the removal procedure outlined in steps 1 through 4.

NOTE: When installing the front axle holders, make sure the "F" mark is forward.

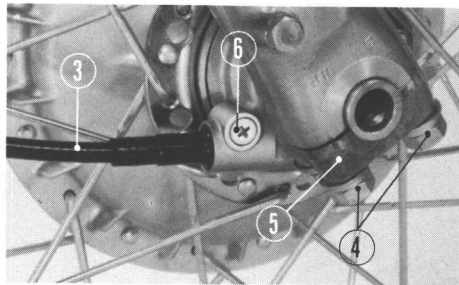

- ⑤ Front axle holder
⑥ Speedometer cable set screw