

XL350 general type

The text of this manual is compiled on the basis of a U.S.A. type. The descriptions given on the following items are the ones which are main different from the text and are applied only to a **general type**.

• Headlight Beam Adjustment

The headlight beam must be properly adjusted for safe nighttime riding. Vertical adjustment is made by turning the adjusting screw ① located on the headlight rim.

